

**CROSS SECTION OF SOUTH BRANCH**

Station to Station	T	B	D	W
270+00 - 306+00	18	12	3 1/2	2 1/2
306+00 - 313+00	16	10	3	2
313+00 - 348+11	14	8	3	2

**CROSS SECTION OF WEST BRANCH**







Station to Station	T	B	D	W
0+00 - 9+70	14	9	2 1/2	1 1/2
9+70 - 50+13	11	6	2 1/2	1 1/2

**CROSS SECTIONS OF NORTH BRANCH**

Station to Station	T	B	D	W
0+00 - 0+85	11	8	3	2
3+81 - 14+15	26	18	4	2
17+55 - 81+21	12	8	2	1
81+21 - 96+04	11	7	2	1
96+04 - 103+04	9	5	2	1
103+04 - 114+90	8	4	2	1

**CROSS SECTIONS OF NORTH BRANCH**  
 Scale 1" = 5'  
 STA. 14+15 TO 16+49

**CHUTE GAL. IRON FLUME**

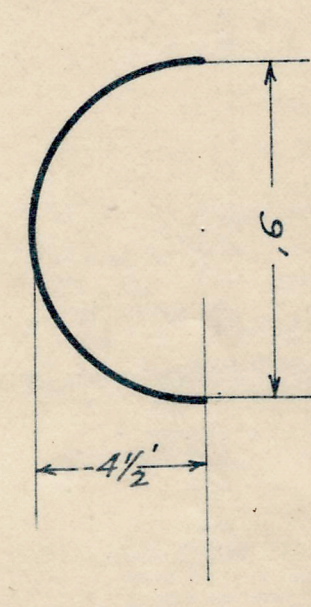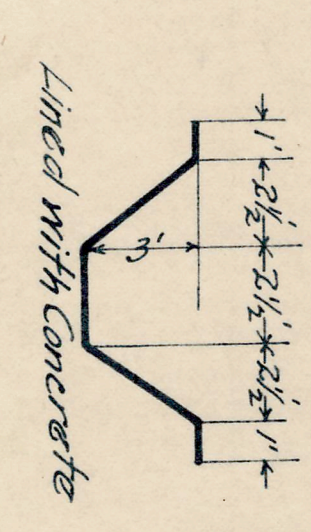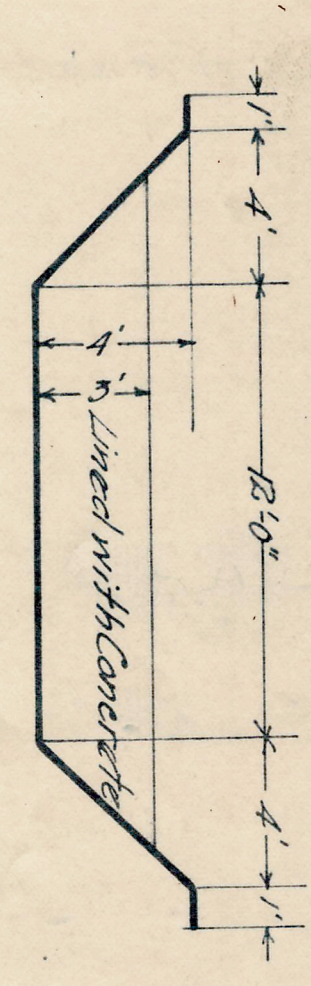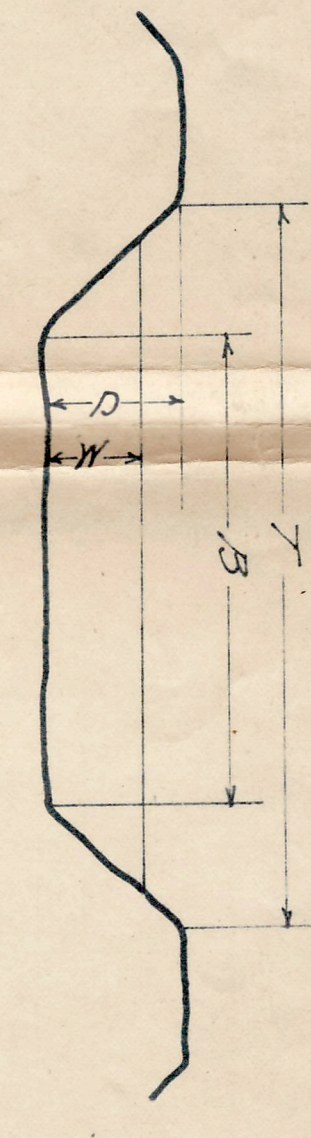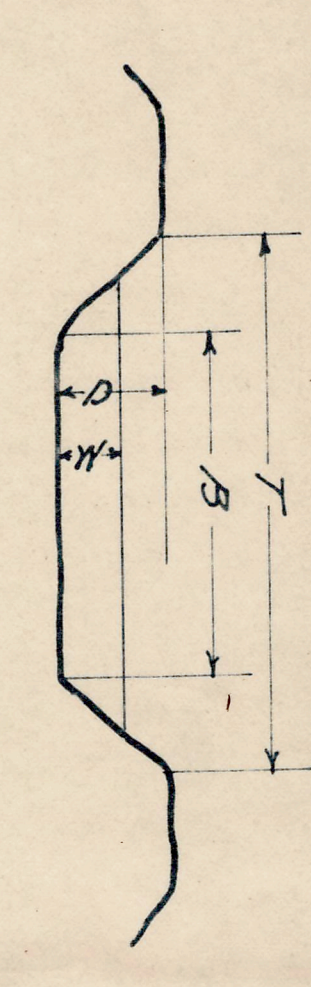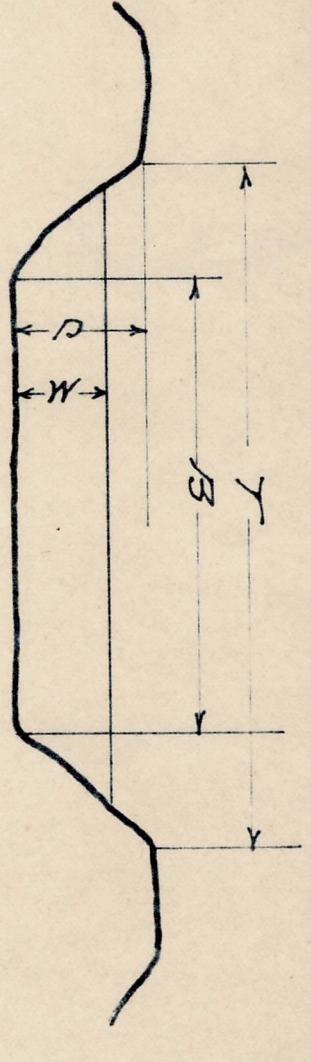

**PROFILES OF SOUTH, WEST & NORTH BRANCHES - SHEET-2**